



## TYPICAL DOME

### Installation Tips:

Domes are temporarily assembled at the plant for inspection before being crated for shipment. We recommend that this procedure be repeated at the jobsite prior to installation.

Dome sections should be laid out on a level surface. Allow ample space between sections for adhesive. Check overall dimensions, adjusting spaces if necessary. This spacing should be maintained during installation. Small domes can be pre-assembled and lifted into place.

