


## STACKING COLUMN DETAIL

### Installation Instructions:

1. A two unit stacking column requires four sections for a completed assembly. Set the bottom stacking sections (**A**, **B**) in the same manner as shown in the installation instructions for a STANDARD COLUMN COVER: with the exception of attachment of the metal angle support brace. Attach the metal angle brace to the underside of the top flange.
2. Apply construction adhesive to the top flange of section (**B**). Position section (**C**) on top of section (**B**). Insure proper alignment of sections (**B**) and (**C**). To evenly distribute anchor points throughout assembly, alternate the sides installed first in each stacking section.
3. Apply construction adhesive to the bottom of the lower flange and to both side flanges of section (**D**) and place it firmly against section (**C**). Band them together firmly using several bands spaced along the column to insure uniform pressure.
4. Attach the top flanges to the structure with a metal angle braces. For additional stacking units, repeat the above process.

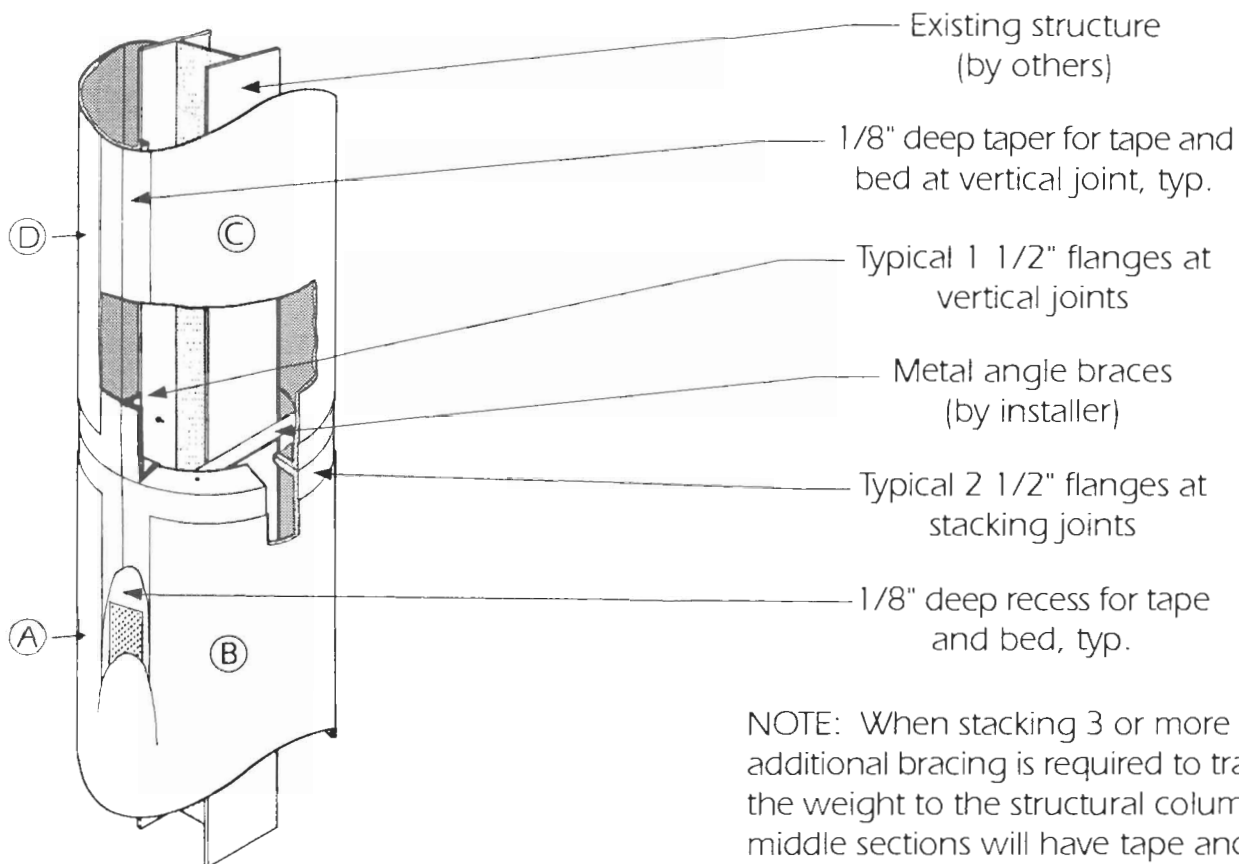

NOTE: When stacking 3 or more units, additional bracing is required to transfer the weight to the structural column. All middle sections will have tape and bed recesses at both ends.